



AS 1200 AC1


LED Akku-Sprühgebläse
 LED Battery spray blower
 LED pulvérisateur souffleur à batterie
 LED irroratrice con soffiatore a batteria

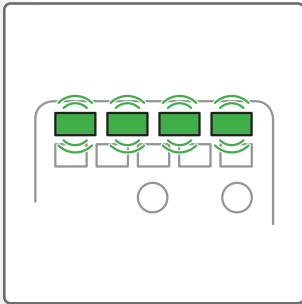


Kein Turbo + Ladezustand (100%)
 No turbo + Charge state (100%)
 Pas de turbo + Etat de charge (100%)
 Nessun turbo + Stato di carica (100%)

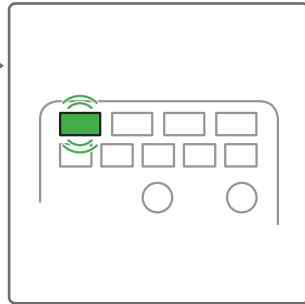


Kein Turbo + Ladezustand (10%)
 No turbo + Charge state (10%)
 Pas de turbo + Etat de charge (10%)
 Nessun turbo + Stato di carica (10%)

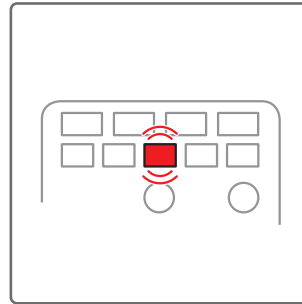


Standby
 Standby
 Mode veille
 Standby

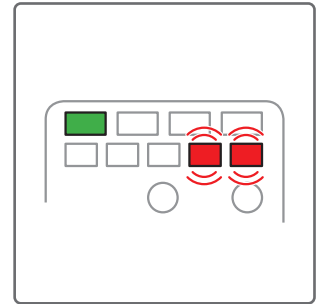


Akku leer
 Battery empty
 Batterie vide
 Batteria scarica

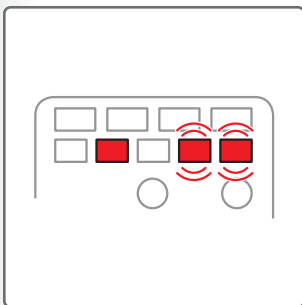


Überhitzung
 Overheating
 Surchauffe
 Surriscaldamento

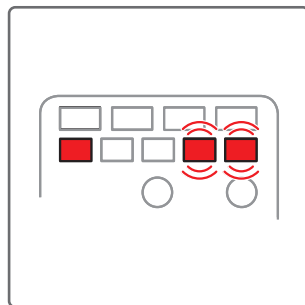


Elektronikfehler
 Electronic fault
 Défaut électronique
 Guasto elettrico

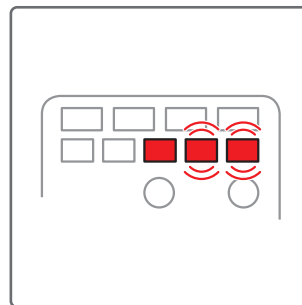


Motorfehler
 Motor fault
 Défaut moteur
 Guasto al motore

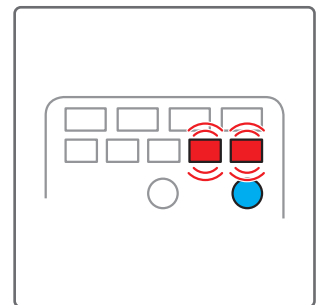


Ventilstörung
 Valve fault
 Défaut soupape
 Interferenza con la valvola

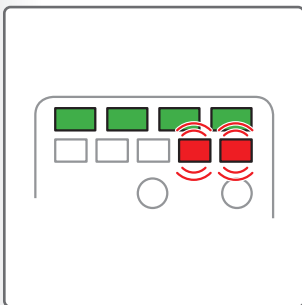


Überspannung
 Overvoltage
 Surtension
 Sovratensione

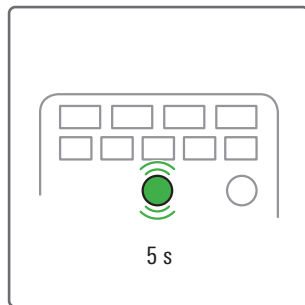

Gesperrt durch Zusatzanwendung
 Blocked by additional application
 Verrouillé par une application supplémentaire
 Bloccato da un'applicazione aggiuntiva

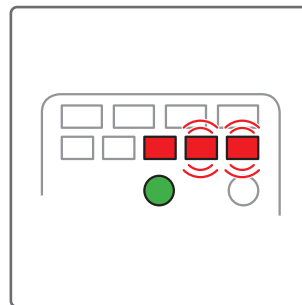

Fehler Zusatzanwendung
 Error additional application
 Erreur application supplémentaire
 Errore nell'applicazione aggiuntiva

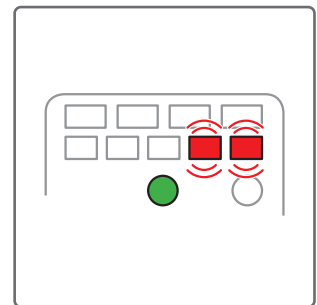

Überstrom Zubehörschnittstelle
 Overcurrent at accessory interface
 Surintensité interface accessoire
 Sovracorrente interfaccia accessori