


AS 1200

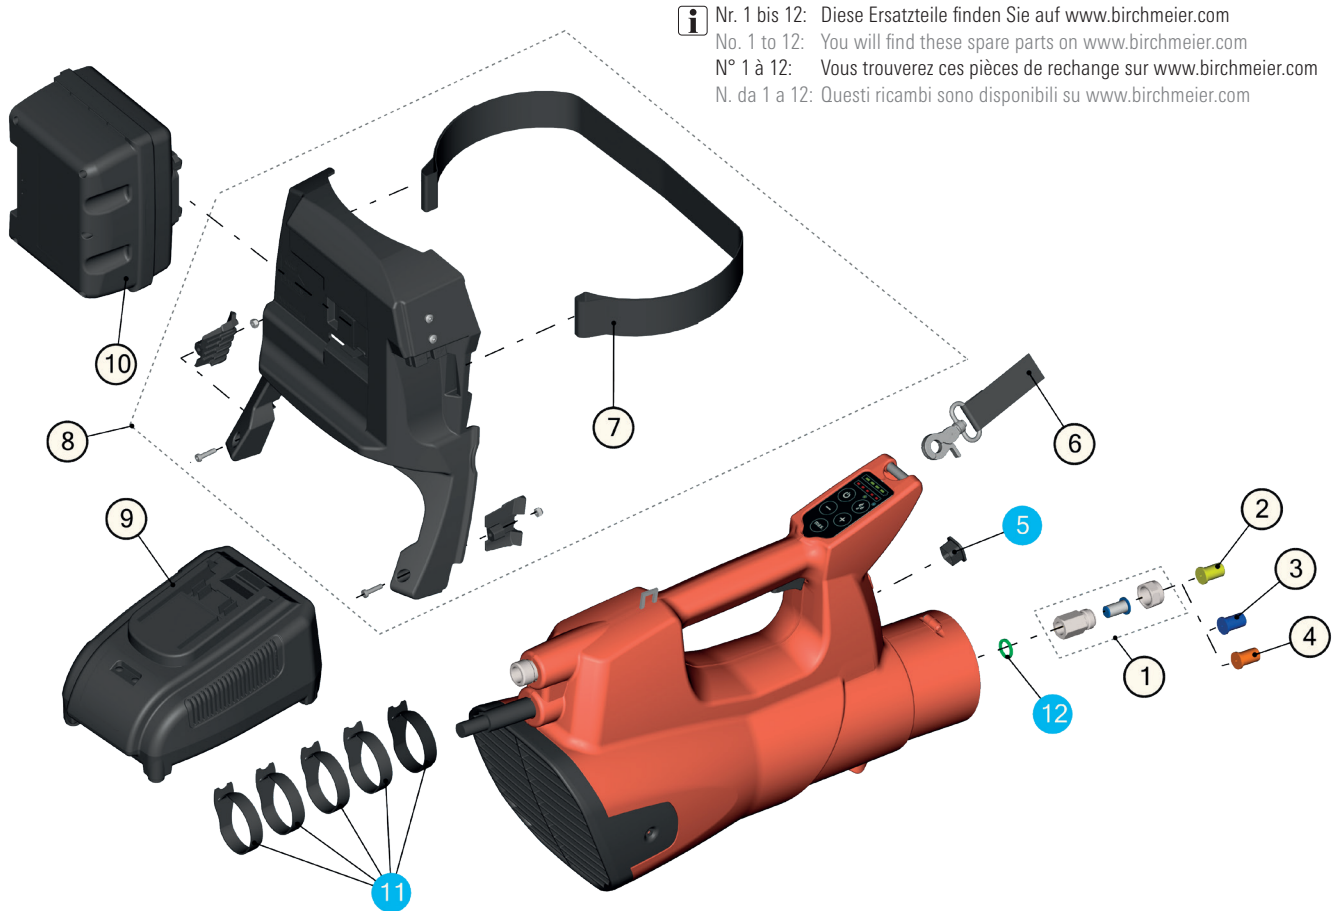


i Nr. 1 bis 12: Diese Ersatzteile finden Sie auf www.birchmeier.com
 No. 1 to 12: You will find these spare parts on www.birchmeier.com
 N° 1 à 12: Vous trouverez ces pièces de rechange sur www.birchmeier.com
 N. da 1 a 12: Questi ricambi sono disponibili su www.birchmeier.com


- | | |
|---|-------------------------|
| <p>● Wartungsset AS 1200
 Maintenance kit AS 1200
 Kit d'entretien AS 1200
 Kit di manutenzione AS 1200</p> | <p>Art.Nr. 12050801</p> |
| <p>① Düsenhalter Messing vernickelt G1/4"i
 Nozzle holder brass nickled G1/4"i
 Porte-buse en laiton nicklé G1/4"i
 Porta ugello in ottone nichelato G1/4"i</p> | <p>Art.Nr. 12103101</p> |
| <p>② Antidrift-Hohlkegeldüse AITXA 8002 VK
 Anti drift hollow cone nozzle AITXA 8002 VK
 Buse à cône creux anti dérivants AITXA 8002 VK
 Ugello a cono vuoto anti deriva AITXA 8002 VK</p> | <p>Art.Nr. 12049701</p> |
| <p>③ Antidrift-Hohlkegeldüse AITXA 8003 VK
 Anti drift hollow cone nozzle AITXA 8003 VK
 Buse à cône creux anti dérivants AITXA 8003 VK
 Ugello a cono vuoto anti deriva AITXA 8003 VK</p> | <p>Art.Nr. 12049801</p> |
| <p>④ Antidrift-Hohlkegeldüse AITXA 8001 VK
 Anti drift hollow cone nozzle AITXA 8001 VK
 Buse à cône creux anti dérivants AITXA 8001 VK
 Ugello a cono vuoto anti deriva AITXA 8001 VK</p> | <p>Art.Nr. 12049601</p> |
| <p>⑥ Entlastungsgurt
 Load bearing belt
 Sangle de décharge
 Tracolla di alleggerimento</p> | <p>Art.Nr. 12042301</p> |
| <p>⑦ Klettriemen
 Velcro strap
 Bande auto-agrippante
 Fasce di velcro</p> | <p>Art.Nr. 12048901</p> |
| <p>⑧ Akku-Trageinheit
 Battery carrier
 Unité de support de la batterie
 Batteria dell'unità</p> | <p>Art.Nr. 12056001</p> |
| <p>⑨ Ladegerät 220-240 V / 50-60 Hz
 Charger 220-240 V / 50-60 Hz
 Chargeur 220-240 V / 50-60 Hz
 Caricabatteria 220-240 V / 50-60 Hz</p> | <p>Art.Nr. 12056102</p> |
| <p>⑩ Li-Ion Akku 25.2 V / 9.8 Ah
 Li-Ion battery 25.2 V / 9.8 Ah
 Batterie Li-Ion 25.2 V / 9.8 Ah
 Batteria Li-Ion 25.2 V / 9.8 Ah</p> | <p>Art.Nr. 12041901</p> |

AS 1200


LED Akku-Sprühgebläse
 LED Battery spray blower
 LED pulvérisateur souffleur à batterie
 LED irroratrice con soffiatore a batteria

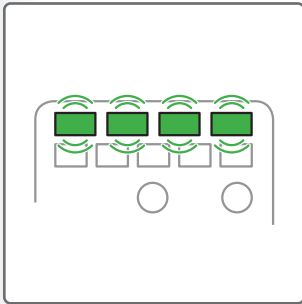


Kein Turbo + Ladezustand (100%)
 No turbo + Charge state (100%)
 Pas de turbo + Etat de charge (100%)
 Nessun turbo + Stato di carica (100%)

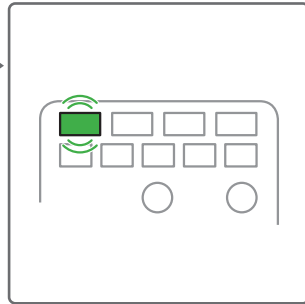


Kein Turbo + Ladezustand (10%)
 No turbo + Charge state (10%)
 Pas de turbo + Etat de charge (10%)
 Nessun turbo + Stato di carica (10%)

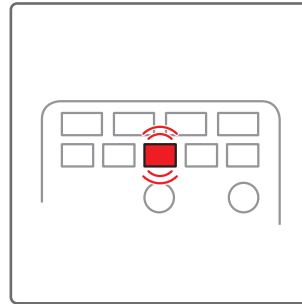


Standby
 Standby
 Mode veille
 Standby

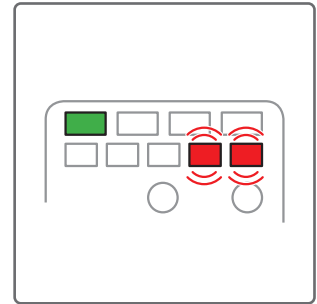


Akku leer
 Battery empty
 Batterie vide
 Batteria scarica

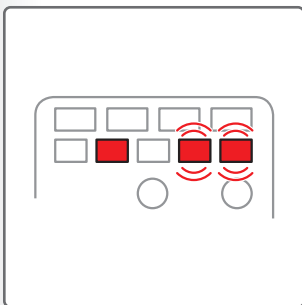


Überhitzung
 Overheating
 Surchauffe
 Surriscaldamento

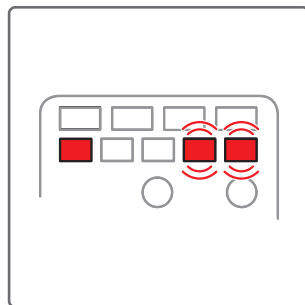


Elektronikfehler
 Electronic fault
 Défaut électronique
 Guasto elettrico

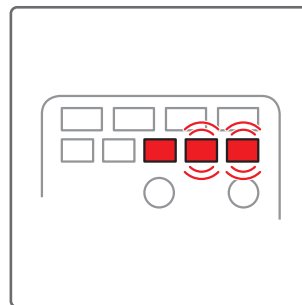


Motorfehler
 Motor fault
 Défaut moteur
 Guasto al motore

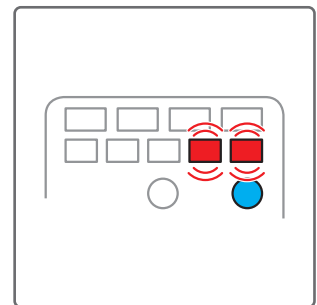


Ventilstörung
 Valve fault
 Défaut soupape
 Interferenza con la valvola

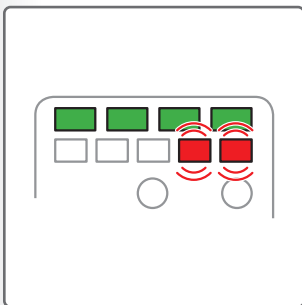


Überspannung
 Overvoltage
 Surtension
 Sovratensione

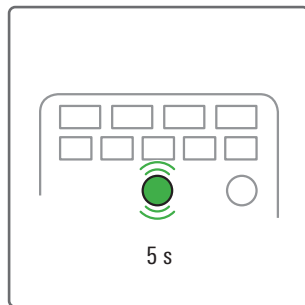

Gesperrt durch Zusatzanwendung
 Blocked by additional application
 Verrouillé par une application supplémentaire
 Bloccato da un'applicazione aggiuntiva

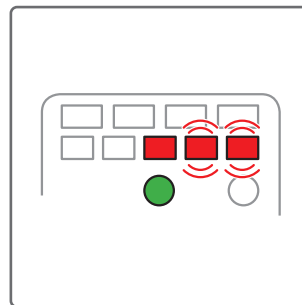

Fehler Zusatzanwendung
 Error additional application
 Erreur application supplémentaire
 Errore nell'applicazione aggiuntiva

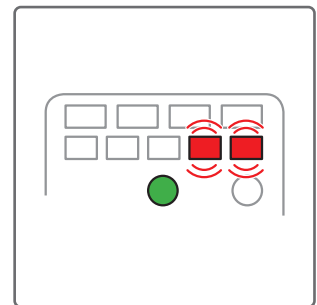

Überstrom Zubehörschnittstelle
 Overcurrent at accessory interface
 Surintensité interface accessoire
 Sovracorrente interfaccia accessori